

## PC 1050 Water pump



### Документы

Starter assy and engine (Until 06/04/08)

---

Starter assy and engine (From 07/04/08)


---

Pump


---

Carburettor

---

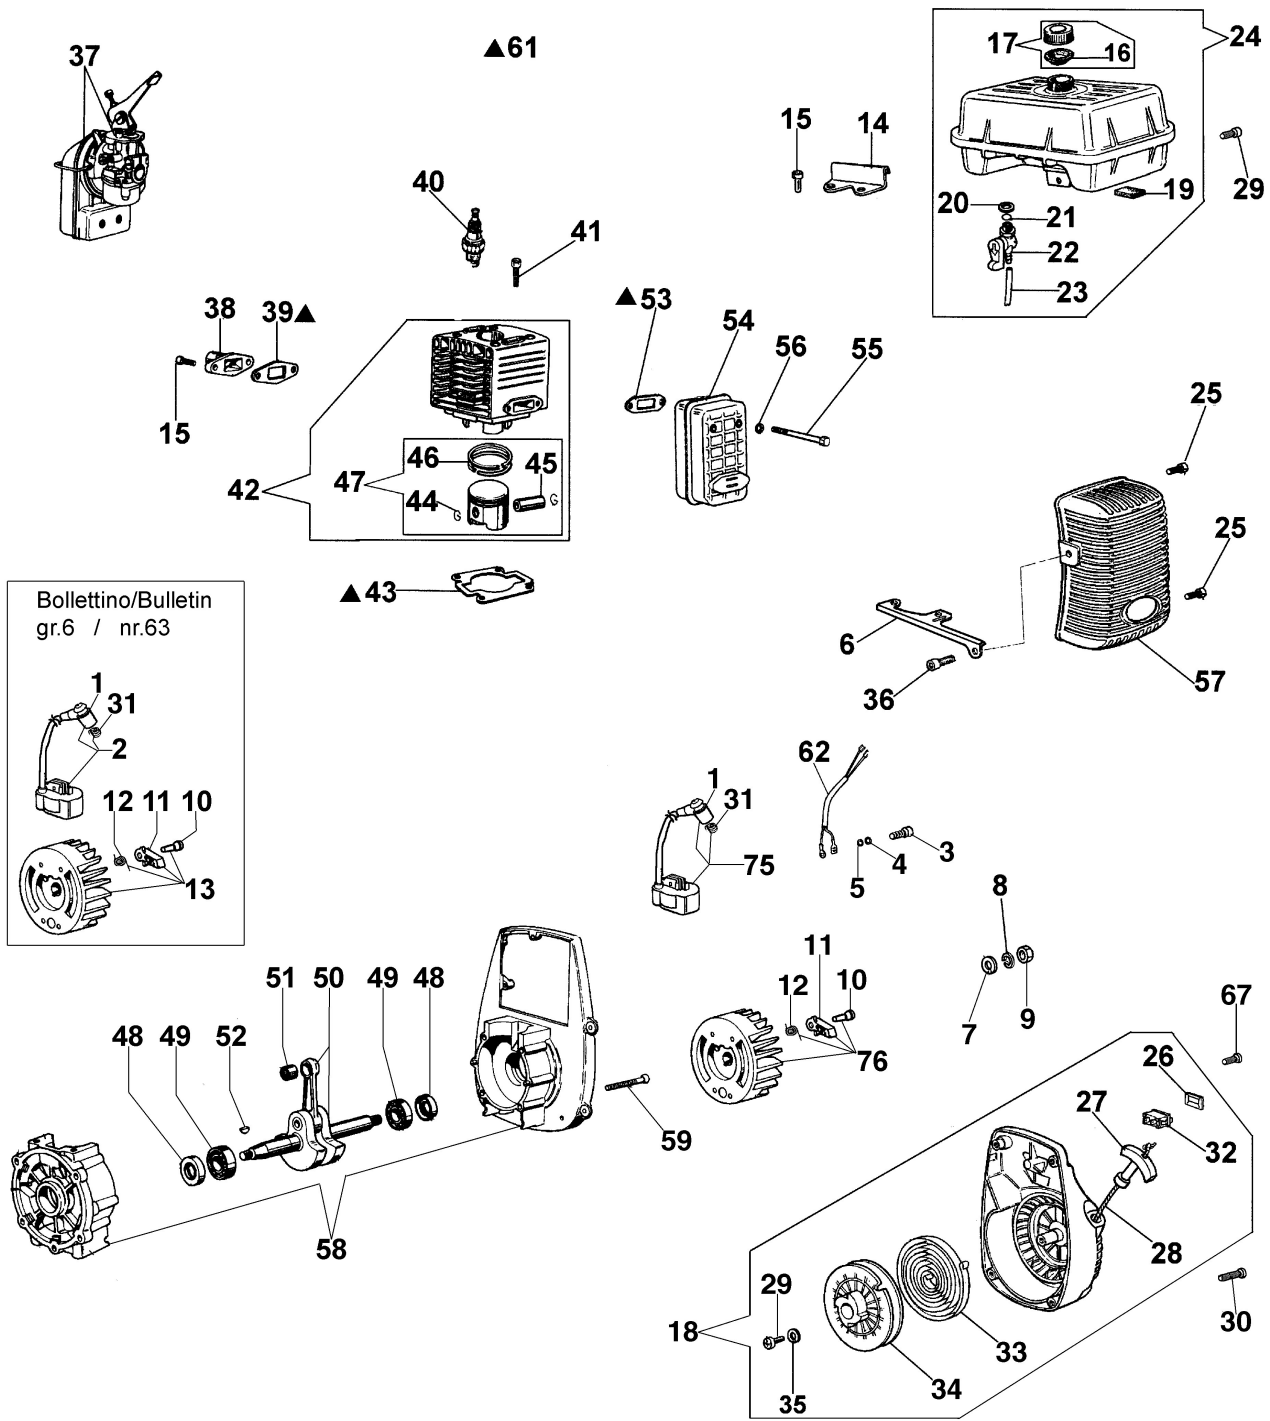

**1ª serie  
1st series**


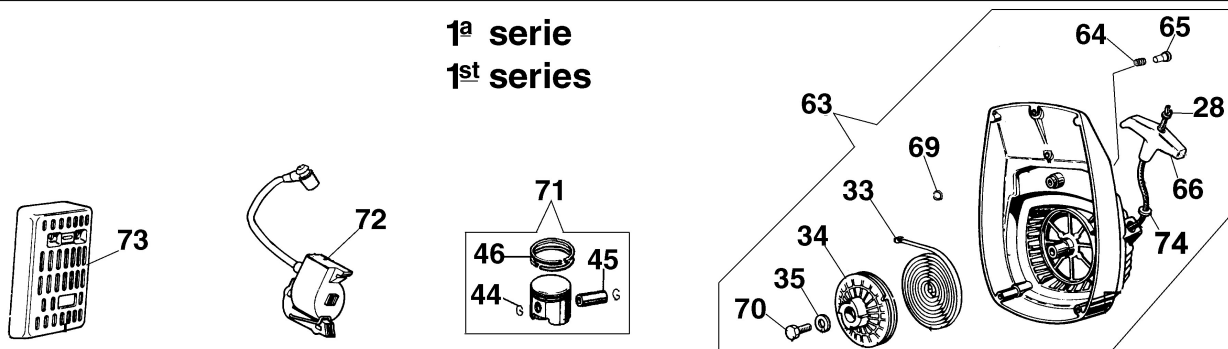


## изображение Starter assy and engine (Until 06/04/08)


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	094600097AR	Spark plug cap				BT6-049-05/07
2	1	301000419	Flywheel and coil kit				BT6-049-05/07
3	2	094000097	Screw				
4	2	3819005R	Washer				
5	2	3916004R	Washer				
6	1	301000342AR	Support				
7	1	3818011AR	Washer				
8	1	3819013R	Grower				
9	1	320000028R	Nut				
10	2	004000436R	Pin				BT6-049-05/07
11	2	300000038R	Pawl				BT6-049-05/07
12	2	300000040R	Spring				BT6-049-05/07
13	1	301000419	Flywheel and coil kit				BT6-049-05/07
14	1	301000003R	Support				
15	4	3801010R	Screw				
16	1	300000025	Gasket				
17	1	300000022R	Tank cap				
18	1	301000348AR	Starter assy				
19	1	301000049	Felt				
20	1	3055098R	Ring				
21	1	3049006R	O-ring				
22	1	3055049R	Tap				
23	1	300000026AR	Tube				
24	1	301000346R	Fuel tank				
25	2	3960073R	Screw				
26	1	2317013R	Guard				
27	1	093500397R	Starter handle				
28	1	4098073R	Starter rope				
29	1	094600041AR	Screw				
30	2	3960081AR	Screw				
31	1	094600169AR	Spring				BT6-049-05/07
32	1	2317021R	Switch				
33	1	004000132R	Spring				
34	1	300000016R	Pulley				
35	1	3918006R	Washer				
36	1	3801008R	Screw				
37	1	302000007DR	Carburetor H190-1				
38	1	301000025BR	Manifold				
39	1	301000026	Gasket				
40	1	005000019R	Spark plug				
41	4	3801013R	Screw				
42	1	301000365B	Complete cylinder Ø40				
43	1	375200078R	Gasket				
44	2	004900061R	Ring				

## изображение Starter assy and engine (Until 06/04/08)

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
45	1	301000035R	Piston pin				
46	2	074000405R	Piston ring				
47	1	301000375B	Piston assy Ø40				
48	2	3050015AR	Seal ring				
49	2	3034012R	Bearing				
50	1	301000054A	Crankshaft				
51	1	3037005R	Bearing				
52	1	301000047R	Key				
53	1	300000035R	Gasket				
54	1	301000357AR	Muffler				
55	2	005400303R	Screw				
56	2	3819006R	Washer				
57	1	375200071AR	Muffler cover				
58	1	301000408	Crankcase assy				BT6-049-05/07
59	4	3801066	Screw				
61	1	301000113A	Gasket set				
62	1	301000349	Cable				
63	1	301000095	Starter assy				
64	1	301000010	Spring				
65	1	321000056A	Pump assy				
66	1	005000122R	Starter handle				
67	2	3960092AR	Screw				
69	1	3026003R	Ring				
70	1	301000042R	Screw				
71	1	301000081	Piston assy Ø40				
72	1	301000024R	Ignition coil				
73	1	341000009	Guard				
74	1	006000829R	Washer				
75	1	301000379R	Ignition coil				BT6-049-05/07
76	1	301000384R	Flywheel				BT6-049-05/07

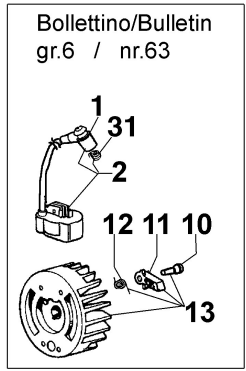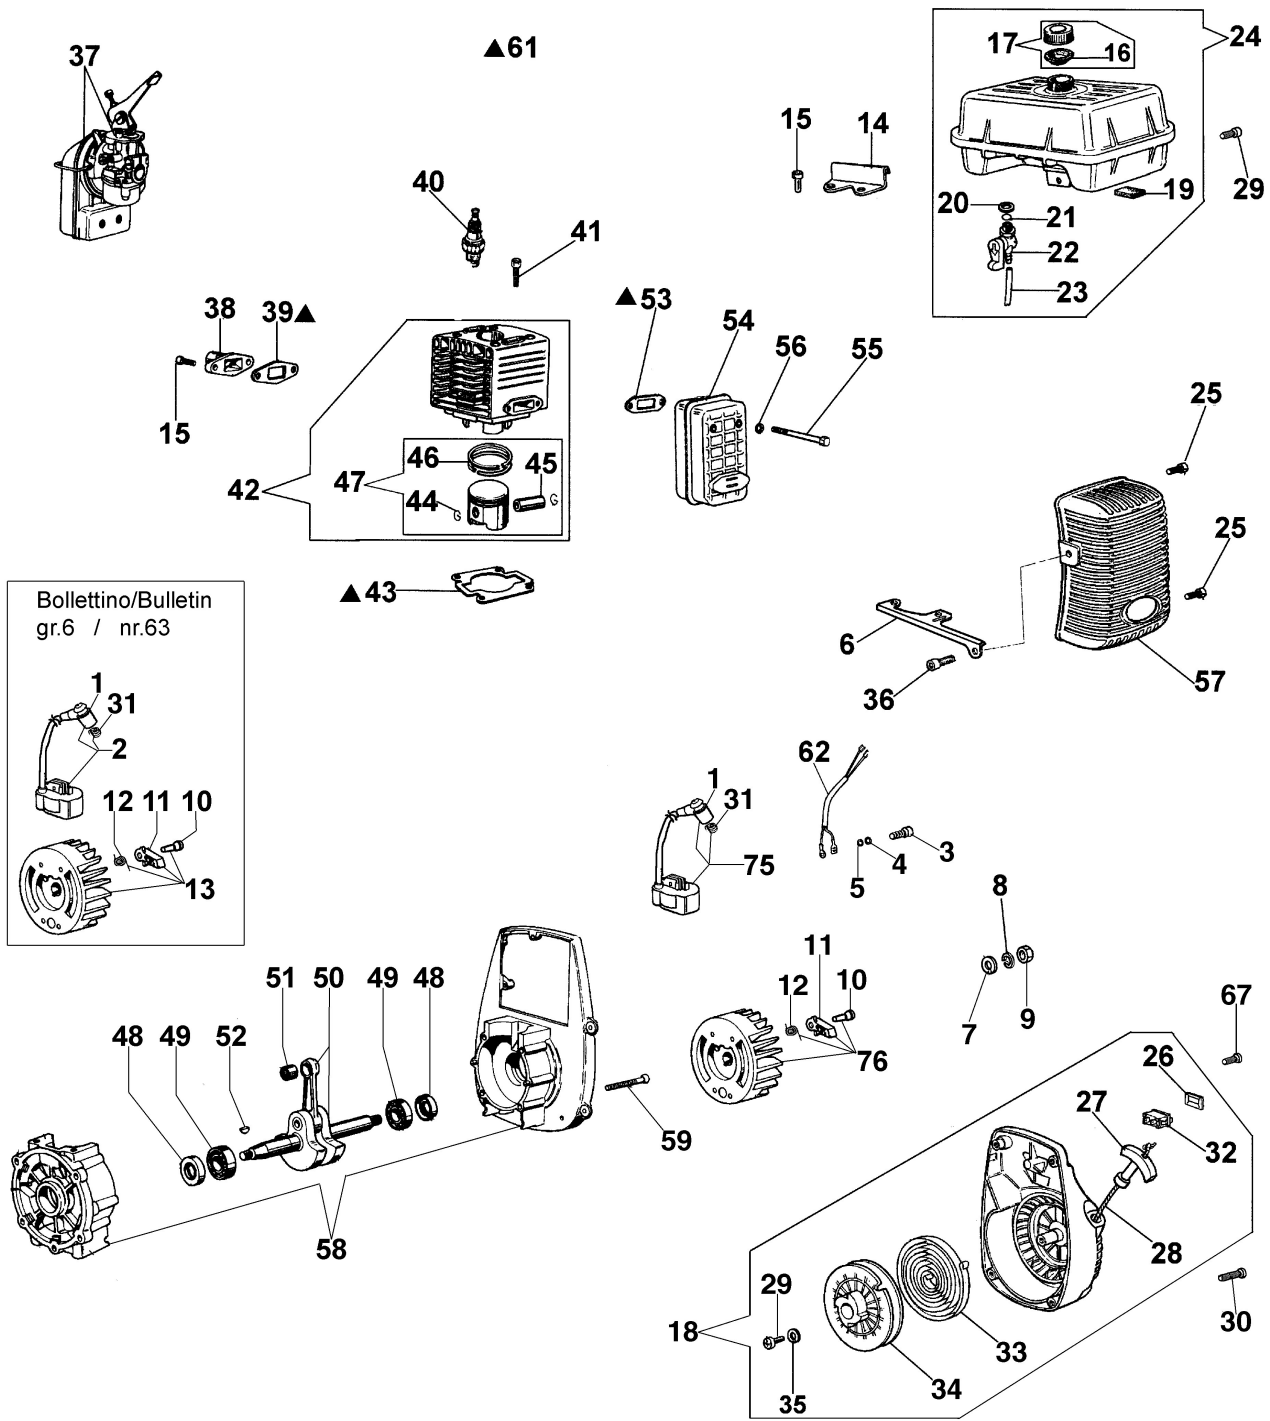

**1ª serie**  
**1st series**

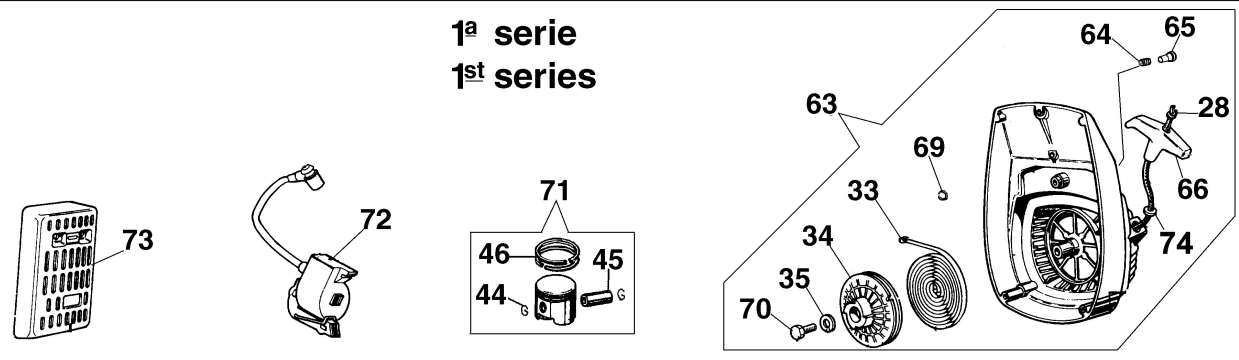


## изображение Starter assy and engine (From 07/04/08)


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	094600097AR	Spark plug cap				
2	1	301000419	Flywheel and coil kit				
3	2	094000097	Screw				
4	2	3819005R	Washer				
5	2	3916004R	Washer				
6	1	301000342AR	Support				
7	1	3818011AR	Washer				
8	1	3819013R	Grower				
9	1	320000028R	Nut				
10	2	004000436R	Pin				
11	2	300000038R	Pawl				
12	2	300000040R	Spring				
13	1	301000419	Flywheel and coil kit				
14	1	301000003R	Support				
15	4	3801010R	Screw				
16	1	300000025	Gasket				
17	1	300000022R	Tank cap				
18	1	301000355AR	Starter assy				
19	1	301000049	Felt				
20	1	3055098R	Ring				
21	1	3049006R	O-ring				
22	1	3055049R	Tap				
23	1	300000026AR	Tube				
24	1	301000346R	Fuel tank				
25	2	3960073R	Screw				
26	1	2317013R	Guard				
27	1	093500397R	Starter handle				
28	1	4098073R	Starter rope				
29	1	094600041AR	Screw				
30	2	3960081AR	Screw				
31	1	094600169AR	Spring				
32	1	2317021R	Switch				
33	1	004000132R	Spring				
34	1	300000016R	Pulley				
35	1	3918006R	Washer				
36	1	3801008R	Screw				
37	1	302000007DR	Carburetor H190-1				
38	1	301000025BR	Manifold				
39	1	301000026	Gasket				
40	1	005000019R	Spark plug				
41	4	3801013R	Screw				
42	1	301000365B	Complete cylinder Ø40				
43	1	375200078R	Gasket				
44	2	004900061R	Ring				

## изображение Starter assy and engine (From 07/04/08)

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
45	1	301000035R	Piston pin				
46	2	074000405R	Piston ring				
47	1	301000375B	Piston assy Ø40				
48	2	3050015AR	Seal ring				
49	2	3034012R	Bearing				
50	1	301000385AR	Crankshaft				BT6-058-04/08
51	1	3037005R	Bearing				
52	1	301000047R	Key				
53	1	300000035R	Gasket				
54	1	301000357AR	Muffler				
55	2	005400303R	Screw				
56	2	3819006R	Washer				
57	1	375200071AR	Muffler cover				
58	1	301000408	Crankcase assy				BT6-058-04/08
59	4	3801066	Screw				
61	1	301000113A	Gasket set				
62	1	301000349	Cable				
63	1	301000095	Starter assy				
64	1	301000010	Spring				
65	1	321000056A	Pump assy				
66	1	005000122R	Starter handle				
67	2	3960092AR	Screw				
69	1	3026003R	Ring				
70	1	301000042R	Screw				
71	1	301000081	Piston assy Ø40				
72	1	301000024R	Ignition coil				
73	1	341000009	Guard				
74	1	006000829R	Washer				
75	1	301000379R	Ignition coil				
76	1	301000384R	Flywheel				

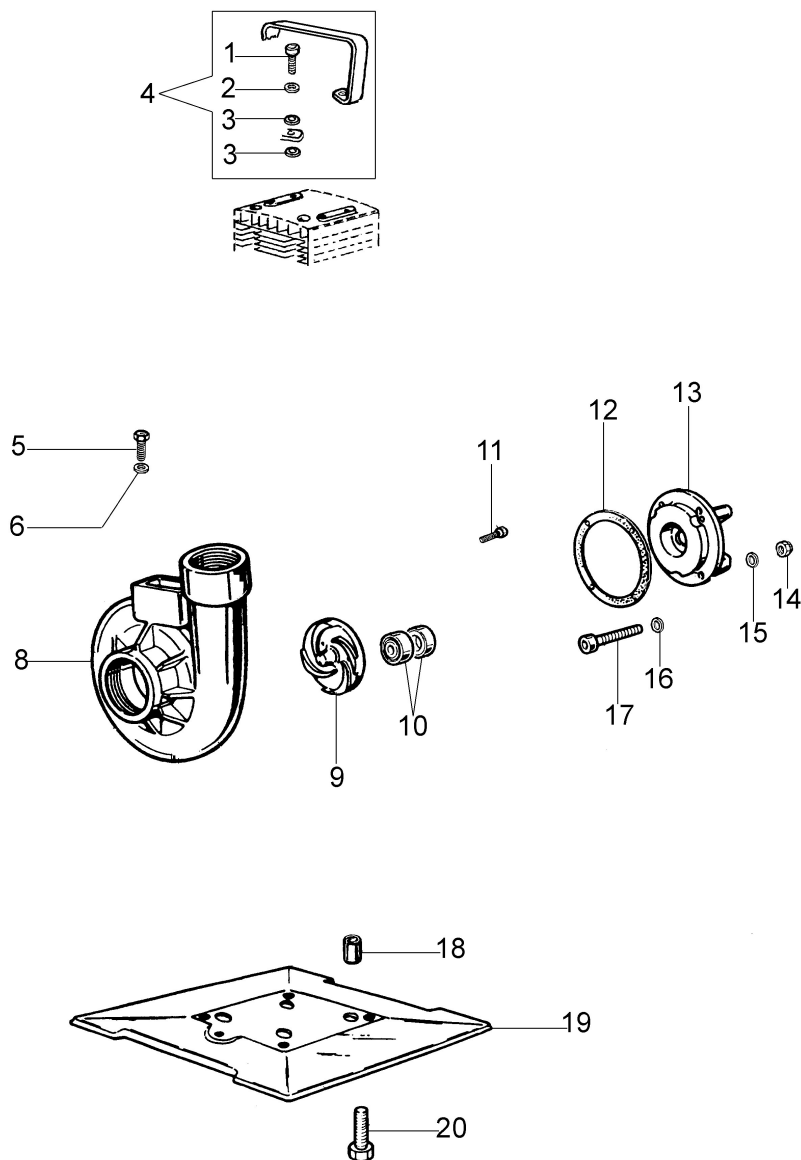

1" 1/2

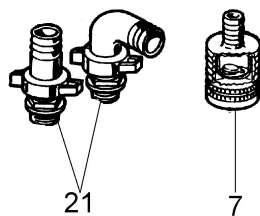





## изображение Pump

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	3801013R	Screw				
2	2	3916005R	Washer				
3	4	4138302	Washer				
4	1	331000034	Complete knob				
5	1	311000004	Screw				
6	1	311000005	Washer				
7	1	332000010R	Water filter kit				
8	1	312000004R	Body				
9	1	321000007R	Impeller				
10	1	321000004	Mechanical seal				
11	1	3806021AR	Screw				
12	1	311000008R	Gasket				
13	1	311000007R	Cover				
14	3	3912005R	Nut				
15	3	004400848	Washer				
16	3	341000004	Washer				
17	3	3801030R	Screw				
18	4	331000004R	Spacer				
19	1	340000034BR	Support				
20	4	3806074R	Screw				
21	1	341000016A	Fittings kit				

I° serie / I<sup>st</sup> series

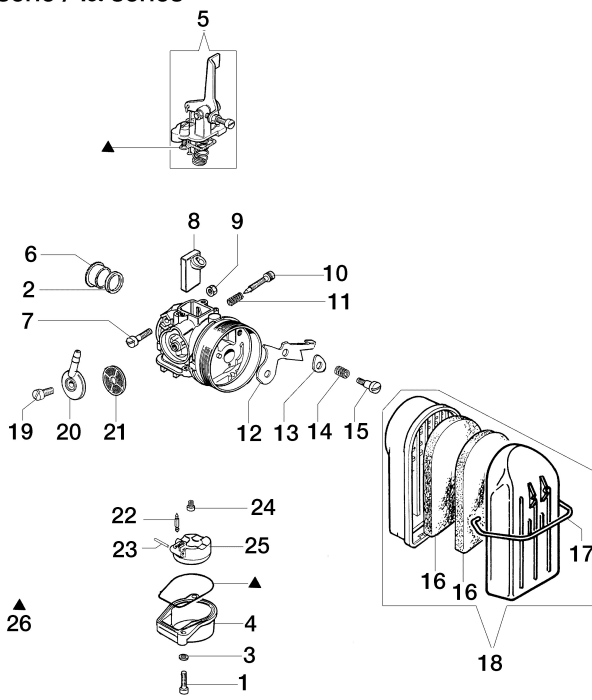

II° serie / II<sup>nd</sup> series

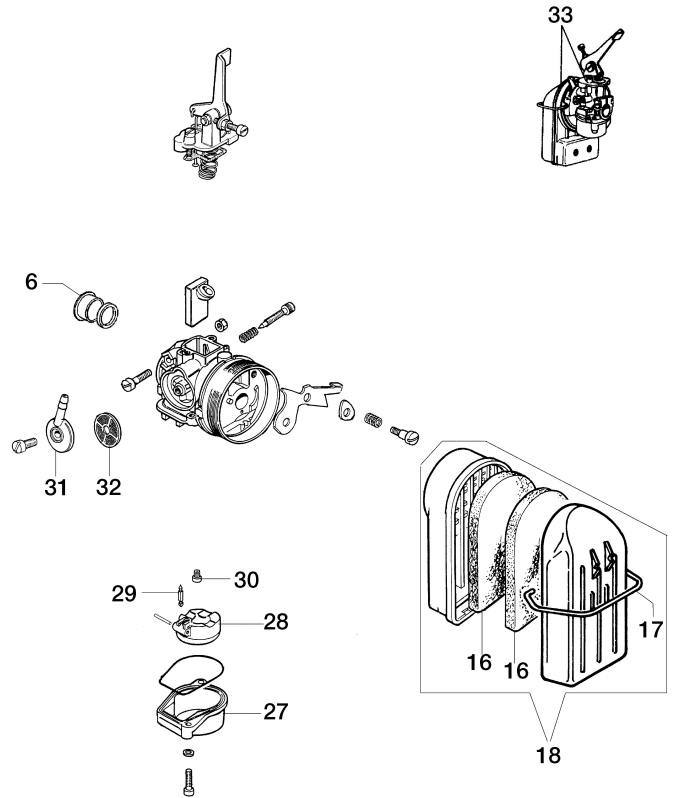

## изображение Carburettor

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	3908005	Screw		SN 4054067695		BT6-095-01/15
2	1	300000267	Gasket		SN 4054067695		BT6-095-01/15
3	2	006000315R	Washer		SN 4054067695		BT6-095-01/15
4	1	300000079	Tank		SN 4054067695		BT6-095-01/15
5	1	300000074	Lever group		SN 4054067695		BT6-095-01/15
6	1	300000266	Bushing		SN 4054067695		BT6-095-01/15
7	1	3801026R	Screw		SN 4054067695		BT6-095-01/15
8	1	302000157	Valve		SN 4054067695		BT6-095-01/15
9	1	034000013R	Nut		SN 4054067695		BT6-095-01/15
10	1	300000221	Screw		SN 4054067695		BT6-095-01/15
11	1	300000220	Spring		SN 4054067695		BT6-095-01/15
12	1	300000195	Valve		SN 4054067695		BT6-095-01/15
13	1	300000226	Clamp		SN 4054067695		BT6-095-01/15
14	1	300000227	Spring		SN 4054067695		BT6-095-01/15
15	1	300000228	Pin		SN 4054067695		BT6-095-01/15
16	2	365200072R	Filter		SN 4054067695		BT6-095-01/15
17	1	365200074R	Spring		SN 4054067695		BT6-095-01/15
18	1	365200077	Air filter kit		SN 4054067695		BT6-095-01/15
19	1	300000215	Screw		SN 4054067695		BT6-095-01/15
20	1	300000216R	Fittings		SN 4054067695		BT6-095-01/15
21	1	300000217	Fuel filter		SN 4054067695		BT6-095-01/15
22	1	300000222R	Needle		SN 4054067695		BT6-095-01/15
23	1	300000225	Pin		SN 4054067695		BT6-095-01/15
24	1	302000156	Jet 58		SN 4054067695		BT6-095-01/15
25	1	300000198	Float		SN 4054067695		BT6-095-01/15
26	1	300000073	Gasket set		SN 4054067695		BT6-095-01/15
27	1	2318494R	Tank	SN 4054067696			BT6-095-01/15
28	1	2318496R	Float	SN 4054067696			BT6-095-01/15
29	1	2318486R	Needle	SN 4054067696			BT6-095-01/15
30	1	2318487R	Jet	SN 4054067696			BT6-095-01/15
31	1	2318488R	Spark plug cap	SN 4054067696			BT6-095-01/15
32	1	2318489R	Fuel filter	SN 4054067696			BT6-095-01/15
33	1	302000007DR	Carburetor H190-1	SN 4054067696			BT6-095-01/15